

# Quick Start Guide for HERMLE centrifuge Z 206 A

## Button function



### Speed and RCF

= Selection of speed within rpm or g-force, with increments of 50/10



### Acceleration and deceleration

= Selection of acceleration and deceleration (level 0-9)



### Running time

= Selection of the running time (max. 99h and 59min, or continuous)



### Lid opening

= Through pressing this button, the lid opens after standstill of the unit. An automatically blocking system makes sure, that the rotor is not moving at that time



### Stop

= The unit can be stopped at any time



### Start

= The unit only can be started, if the lid is closed



### Adjusting knob

= Adjusting knob for setting the values



Notes for the user:

Please note, that a restart after a run is only possible after the lid of the unit is opened and closed again.

If this is not the case, inside the rpm/rcf-display will flash the word „open“.

If there is an eventually defect of the centrifuge or a trouble with the current, the lid can be opened manually. Open therefore the plastic knob on the left side of the unit and pull at the cord (emergency opening).


### ATTENTION:

- If there is an emergency opening, the rotor still may turn - do not touch the rotor at any time during this run.
- Check in front of every run, if the rotor fastening screw is fasten enough.
- All places of swing out rotors have to be placed at least with buckets.

### General:

- Fill up the tubes only outside the centrifuge.
- Grease buckets and bolts at the swing out rotors from time to time

## Display function

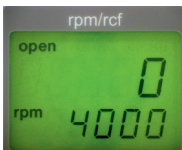

### rpm/rcf - display

Indication of speed (rpm) or relative centrifugation force (rcf). There are shown the preset and actual values



### acc/decel - display

Indication of Acceleration- and Deceleration level



### time - display

Indication of centrifugation time (max. 99h and 59min or continuous run)